Hubble Optics Ultra Light UL16G Dobsonian Assembly instruction manual

03-04-2024

Please read these instructions thoroughly before beginning assembly and subsequent use of the telescope.

1.Unpacking	2
2. Assembly	
2.1 Install the Secondary Mirror	6
2.1.1 Install the Secondary to the diagonal holder	6
2.1.2 Assembly of the Secondary Cage	7
2.2 Assembly of the Dobsonian Rocker	10
2.3 Assembly of the Mirror Box	12
2.3.1 Install the ALT bearings.	14
2.3.2 Install the Primary Mirror	20
2.4 Install the Truss Tubes and Secondary Cage	25
2.4.1 Installation of the Secondary Mirror Cage	28
2.4.2 Installation of the Optional Finder Scope	32
2.5 Balance the scope	32
2.6 Adjust the Sling	33
3. Connect the GoTo wirings	34
4. Collimate the Optics	34
5. Care and Maintenance	37
5.1 Mirror Storage	38
5.2 Mirror Cleaning	38
6. Specification	38
7. Limited Warranty	39
8. Technical Support	39
· -	

WARNING: Never look at the sun with your telescope without a professionally made solar filter. Permanent eye damage or blindness could result. Eye damage is often painless, so there is no warning until it is too late. Children should not be allowed to handle the telescope. Avoid using the type of solar filter that screws into an eyepiece. They are susceptible to cracking under the intense heat that builds up near the focus point, and could cause severe retinal damage. Use only the type of solar filter that covers the front of the telescope. Also, be sure to

leave the cover caps on the finder scope when solar observing. Remove the finder scope altogether when viewing the sun.

1.Unpacking

The UL16G telescope is packed in 4 shipping boxes, as described below. You are recommended to keep the original packages for the future usage.

Make sure all the parts in the Parts List are present. Be sure to check all boxes carefully, as some parts are very small. If anything appears to be missing or broken, immediately email Hubble Optics for assistance.


Box #1: the UL16G Mirror Box

Box #2: The Rocker/Ground board/Upper Cage/Accessories/GoTo Controller


Box #3: Mirror Box

Box #4: Truss Tubes


Quantity	Description
1	Rocker/Ground board
1	GoTo Controller
2	Motor Cables
1	Encoder DB9 Y cable
1	AZM encoder brackets (installed)
1	AZM encoder assembly
1	ALT encoder bracket
1	ALT encoder assembly
1	GoTo Smart Hand Controller and RJ12 6P5C Cable
1	Upper ring
3	Spider Vanes
1	Secondary spider hub and the secondary mirror holder
1	Focuser L bracket (with 2 M5 x 16 screws)
1	PP Mirror Cover (optional)
1	Secondary mirror
1	2" 10:1 dual speed focuser
3	Scope Feet
9	Brass wire to evenly separate cell support bars
1	Nylon Sling belt
18	Mirror Cell Support Pad

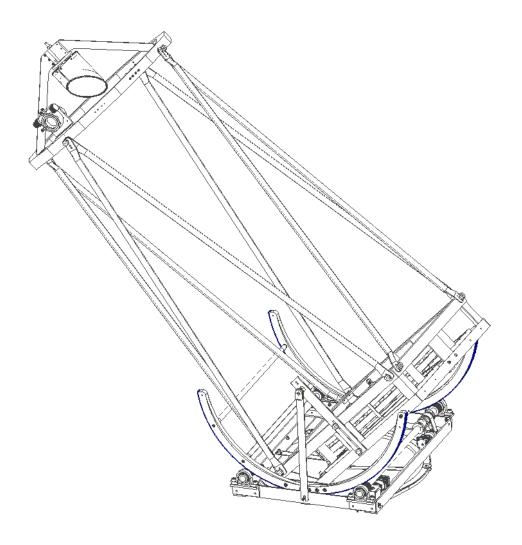

UL16G

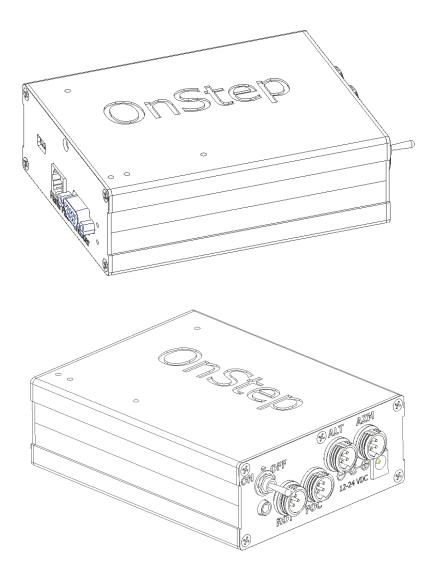


GoTo Controller

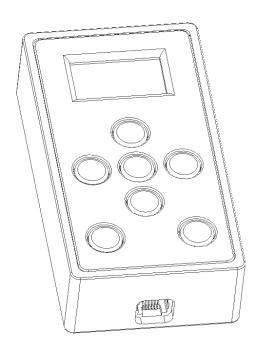

GoTo Smart Hand Controller

2. Assembly

Now that you have unpacked the boxes and familiarized yourself with all the parts in front of you, it's time to begin assembly. You'll need a regular screwdriver, a Phillips screwdriver, a set of metric hex keys (1.5,2,2.5,3, 4, and 5mm), two 6-inch (150mm or smaller) adjustable crescent wrenches, and a scissor.

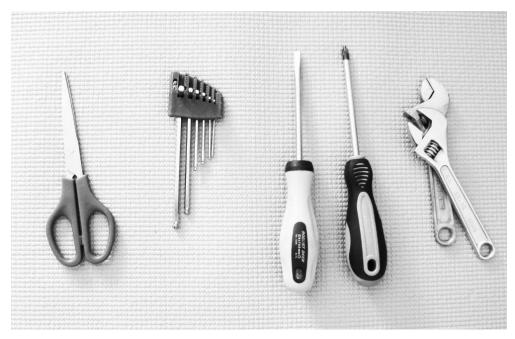


Tools Required (Not provided)

2.1 Install the Secondary Mirror

2.1.1 Install the Secondary to the diagonal holder

The secondary baffle is made of the thin aluminum, please handle the mirror and the baffle with care! First, remove the 5 small side screws holding the secondary baffle. Open the baffle slightly, and carefully slide the secondary mirror into the baffle from the back; let the mirror lightly held by the baffle's rim. Then place the fiber fill behind the secondary mirror to support the mirror. You should place enough fiber packing behind the secondary to hold it snugly in place but don't over-pack it; otherwise, it will cause distortion of the secondary mirror. Then re-install the 5 small screws to secure the baffle and the secondary mirror to the back plate.


You may need to add some spacers between the baffle and the back plate if the baffle is too tight.

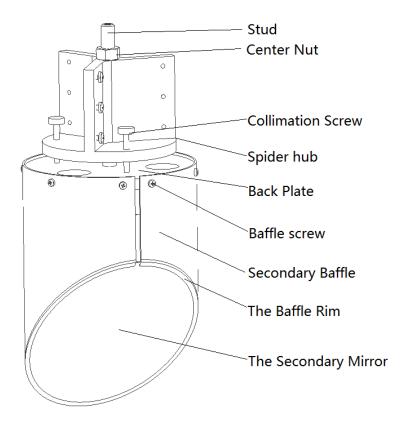


2.1.2 Assembly of the Secondary Cage

Please note that most screws needed for the installation are already installed on the parts for easy identification.


- Attach the three spider wings to the spider holder
- Attach the three spider wings to the upper ring
- Attach the focuser L bracket to the upper ring and tighten the screws
- Attach the focuser to the L bracket and tighten the screws
- Attached the secondary holder with the secondary mirror (installed and cured)
- Roughly adjust the center bolt and the orientation of the secondary holder until the secondary mirror is centered by being viewed from the focuser draw tube
- Adjust and tighten the three collimation screws.

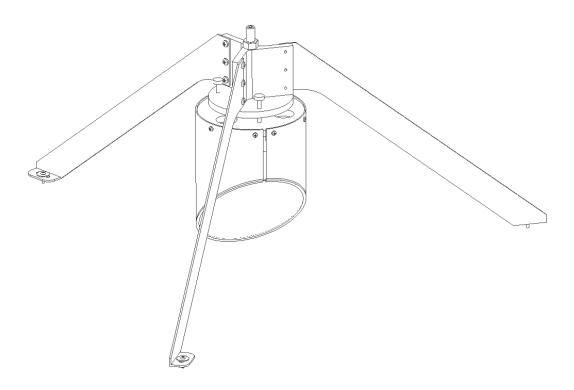


Attach the three spider wings to the central spider hub

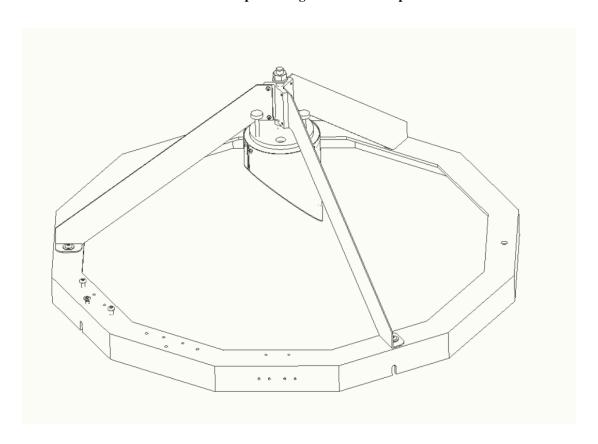

Attach the three spider wings to the upper ring

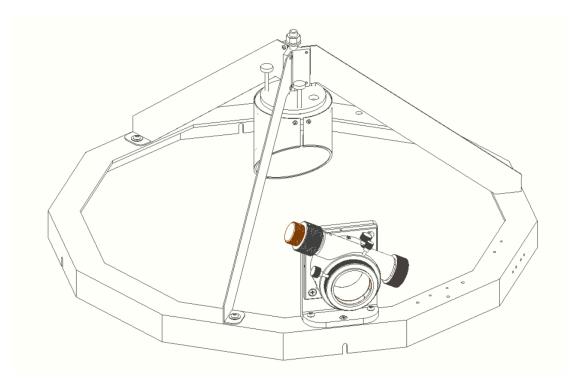


Attach the focuser to the upper ring

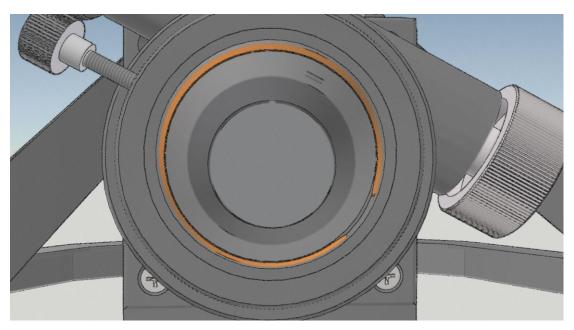


Center the secondary in the focuser draw tube

2.2 Assembly of the Dobsonian Rocker


Install the 3 scope feet first, and level the ground board:

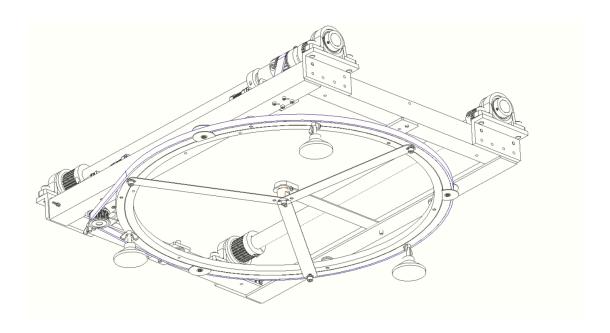


Make sure that the ALT transfer timing belt is tightly fit. The stress of the belt has been adjusted before shipping; however, if needed, you can adjust the belt stress by adjusting the ALT motor assembly installation screws circled in red in the following picture.

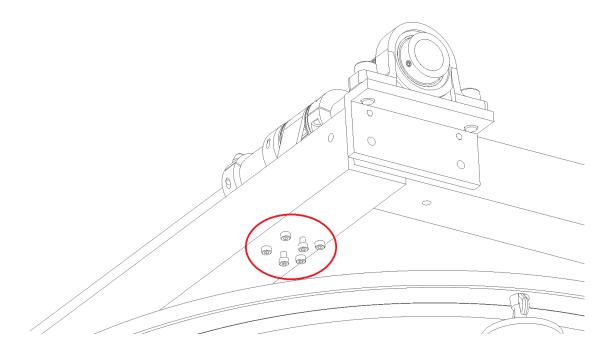

Please make sure to tighten the encoder shaft using the provided M4 nylon screw in the central brass hub.

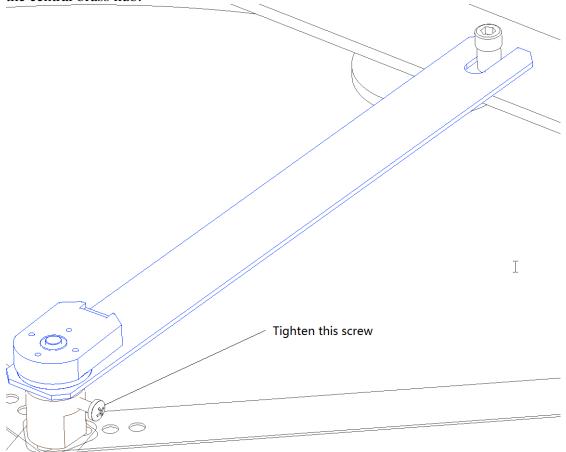

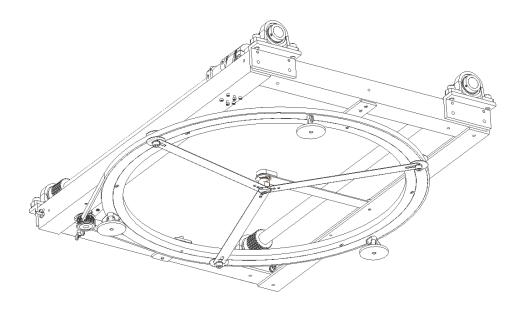


2.3 Assembly of the Mirror Box

The mirror box is very much assembled already; but you do need to install the ALT bearings and load the primary mirror into the mirror box.

Before installing the primary mirror, you need to perform the following tasks:

- Attach the 18 adhesive scratch protectors to the six support angles
- Attach the 12 brass wires to regulate the support bars and angles

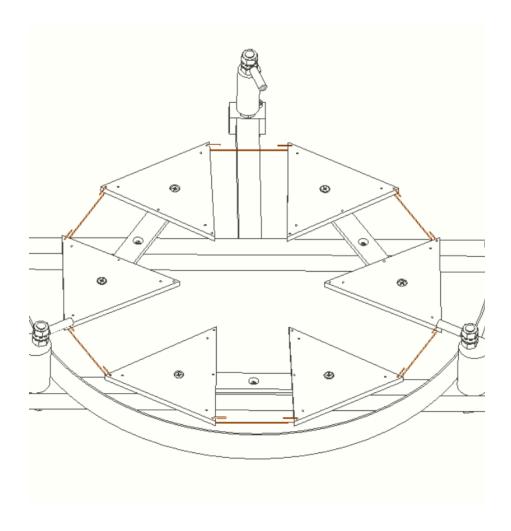


Bend 9 brass wire to the following shape, with the center portion to be about 93.5 mm (a bit longer is OK, but all six should be the same length as much as possible).



Insert the brass wires into the small holes on the support bars, and then bend the head portions to lock the brass wires in the position.


Please note that the mirror cell in the UL16G features a push-pull design. However, for safety during shipping, the three M5 pushing screws are not pre-installed; they are in a bag with an assortment of screws. This is to prevent any potential damage during transit. Upon receiving your system, you will need to install these three M5 locking screws, which are located adjacent to the collimation knobs.

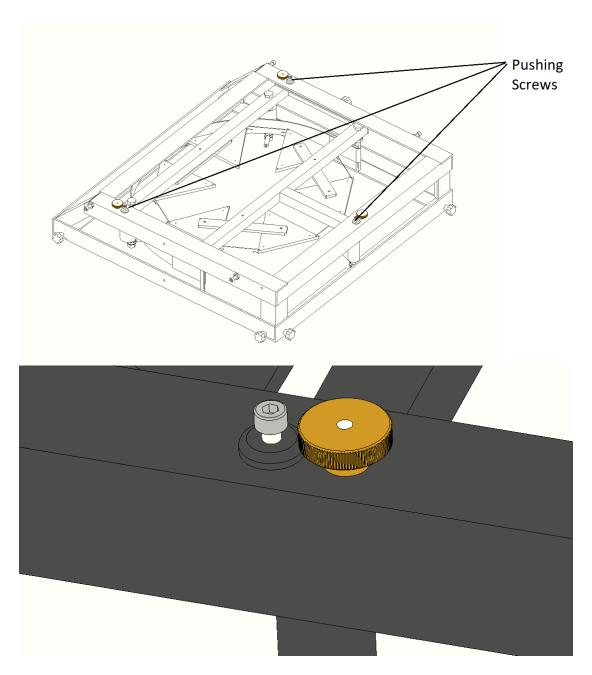



The primary mirror is shipped in its own box. Once the primary mirror is installed in the mirror box, there will be no need to remove the mirror until cleaning is necessary. However, for shipping, long distance transportation, and the long time storage, the primary mirror should be packed tightly in its original package.

2.3.1 Install the ALT bearings.

Rest the Mirror Box on its side. Place the mirror box on its side. Install one matching ALT bearing for this side of the Mirror Box.

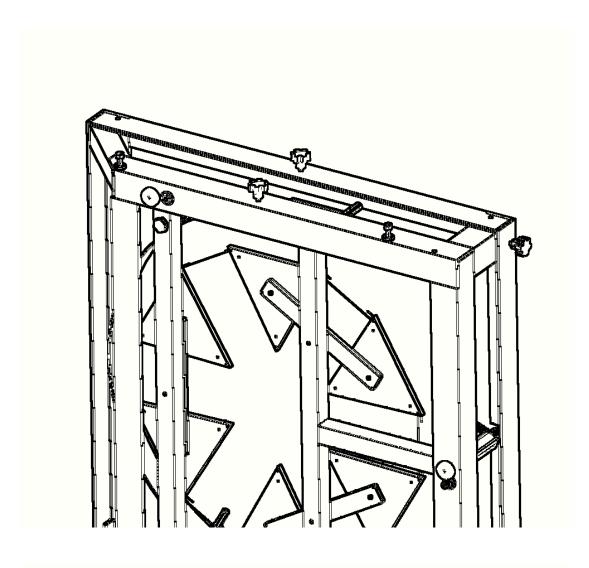


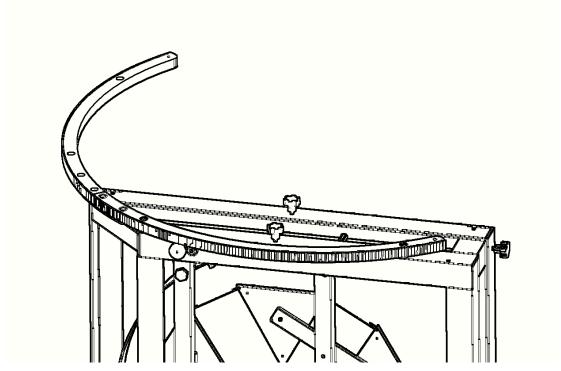

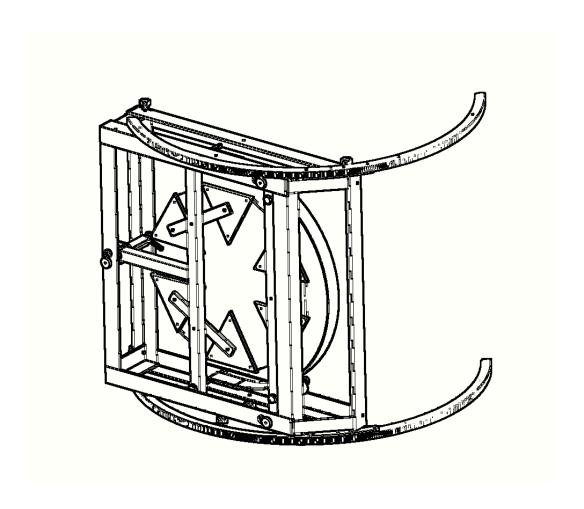


Place the mirror box carefully onto the Rocker/Ground board.




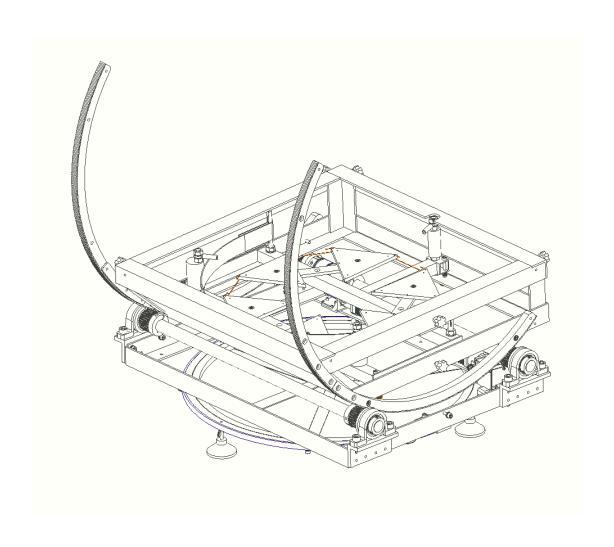

Then, install the 2 front ALT bearing cross bars as bellow:

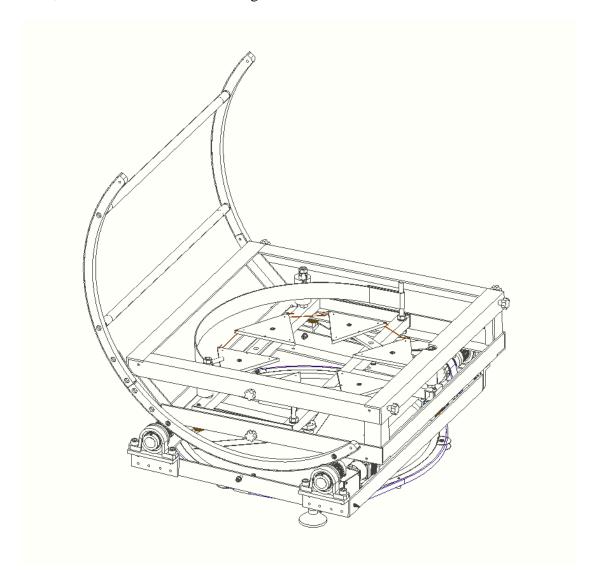


2.3.2 Install the Primary Mirror

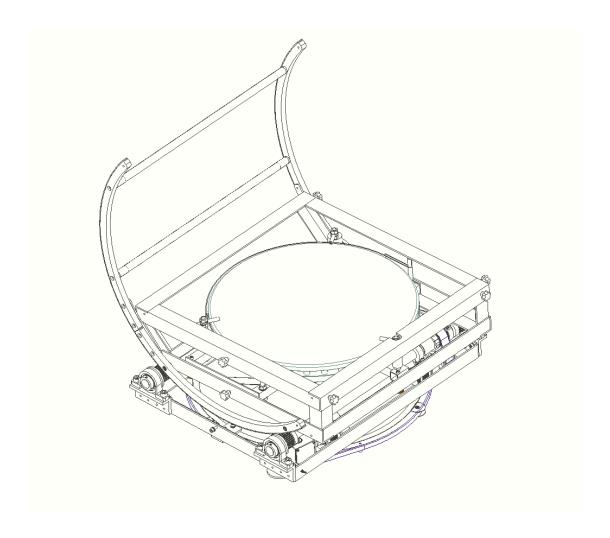

Rotate the three eccentric side pins to make room for the primary mirror. Loosen the locknuts on the top of the mirror clips and turn them aside.


Use a flat head screwdriver to open the split bolts, and insert the sling into the slot. Also loosen the nuts on the two split bolts that hold the sling. Stretch the sling loosely around the two lower side pins.

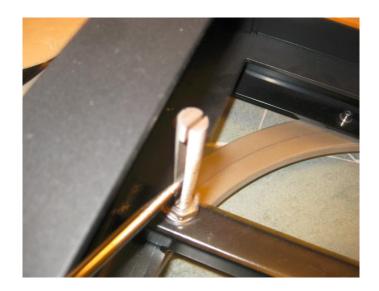



Make sure that all the mirror support bars/triangles are evenly placed in the cell. Pick up the mirror and place it into the mirror cell. Check that the mirror is centered and wiggles it a bit to ensure that the cell parts are moving freely and adjusted to the float of the mirror.

Viewed from the above, the primary mirror should be well centered in the mirror box:

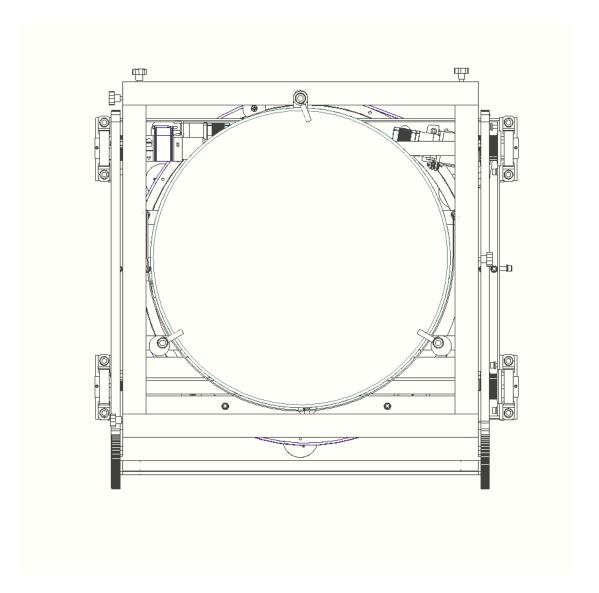


Use a flat head screwdriver to open the split bolts, and insert the sling into the slot. Stretch the sling loosely around the two lower side pins.

- 1. **Secure the Mirror Box:** Ensure the mirror box is secured to the rocker.
- 2. **Position the Mirror Support Bars:** Verify that the three mirror support bars, and all the support triangles are evenly distributed within the mirror cell.
- 3. **Install the Mirror:** Carefully place the mirror into the mirror cell. Center the mirror and gently wiggle it to confirm that the cell components move freely and are properly adjusted to accommodate the mirror's float.
- 4. **Install the Sling:** Position the sling between the side pin and the mirror's edge. Adjust the two lower pins so that there is a gap between the sling encircling the mirror and the side pins.
- 5. **Side Pin Adjustment:** Ensure the side pins do not contact the mirror during observation. If the primary mirror touches the pins, reposition


- the sling and adjust the side pins as needed. Securely tighten the nuts holding the side pins.
- 6. **Mirror Protection Clips:** Adjust the mirror protection clips so they hover 3-6mm above the mirror surface, without touching the mirror. Secure the clips over the mirror and tighten the top lock nuts.
- 7. **Sling and Magic Nylon Tape:** At this stage, the sling should be loosely fitted around the mirror. Leave the sling loose for now; final adjustments will be made after the telescope is fully assembled.

Apply a short piece of the provided magic nylon tape at the lowest part of the mirror, which will rest in the bottom of the sling. Ensure the sling is centered, with equal portions of the mirror above and below it. The magic tape prevents the sling from slipping off when the telescope is pointed upwards.


The bottom side pins should not contact the mirror/sling during observation. However, the top side pins should touch support the mirror lightly.

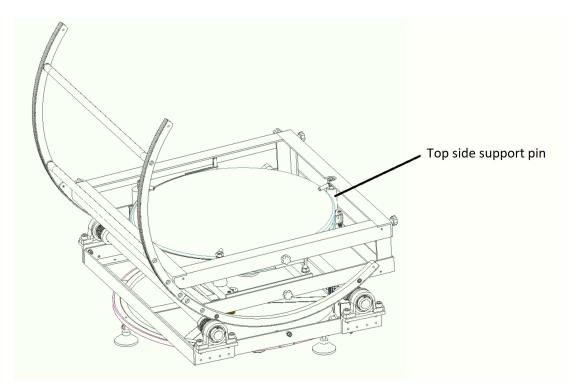

The mirror protecting clips should not contact the mirror at all. Keep the clips above the mirror surface and tighten the top lock nuts.

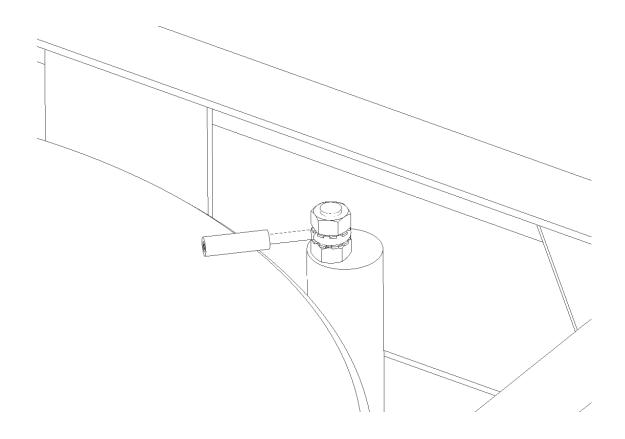

Once the mirror is installed, you should cover the mirror box to protect the mirror from any accident.

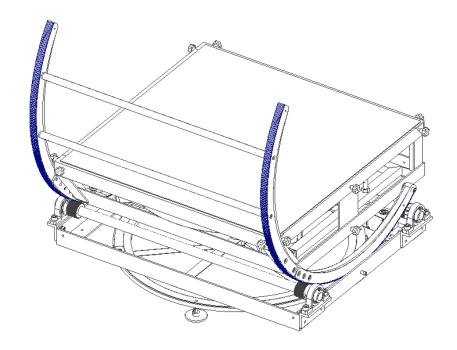


2.4 Install the Truss Tubes and Secondary Cage


2.4.1 Installation of the Truss Tubes

- Asymmetric Truss Tube Ends: The ends of the truss tubes are asymmetrically shaped to enable connection in opposite orientations. This design helps to avoid interference between the tubes during assembly.
- 2. **Primary Mirror Protection:** Ensure that the primary mirror is fully enclosed and protected. A mirror box cover is recommended for this purpose.
- 3. **Truss Tube Connection:** Attach each pair of truss tubes using an M6 knob screw, and secure it with an M6 wing nut. This connection should be made on the side of the tube that has multiple holes. These multiple holes allow for adjustments in the overall tube assembly length, which is necessary to accommodate slight variations in the primary mirror's focal length. Typically, the second hole from the top is the recommended starting point for this connection.
- 4. **Attaching Truss Tubes to Mirror Box:** Finally, connect each pair of truss tubes to the mirror box using a M6 knob screw.



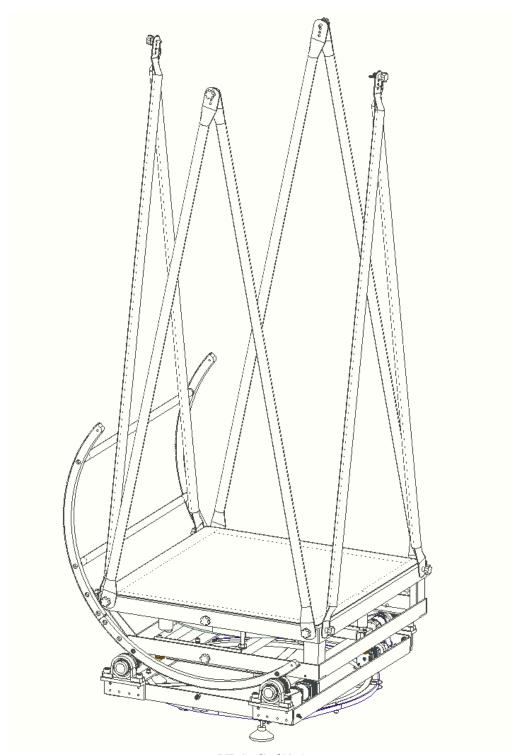


UL16G f/4.5

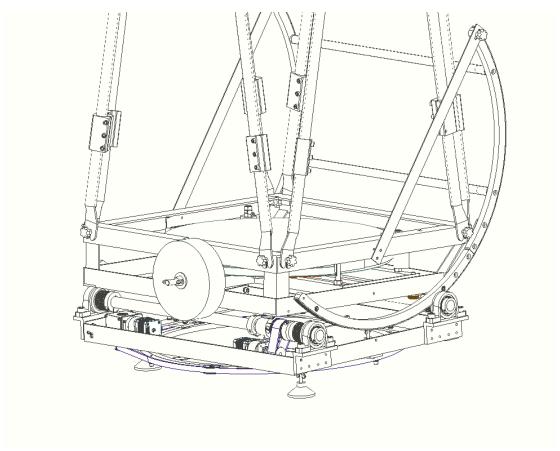


UL16G f/5 with sectional truss tubes and counter weight (not provided)

2.4.2 Installation of the Secondary Mirror Cage


Make sure that the primary mirror is fully protected with a mirror box cover. Then carefully install the upper ring on to the top of the truss tubes. Tighten all the top and bottom truss tubes locking screws once the upper ring is positioned correctly.

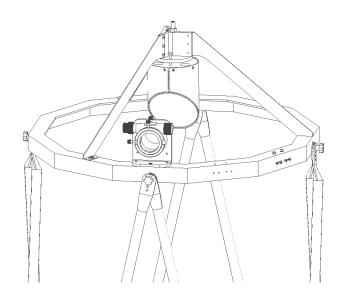

Then install the ALT encoder bracket as below:

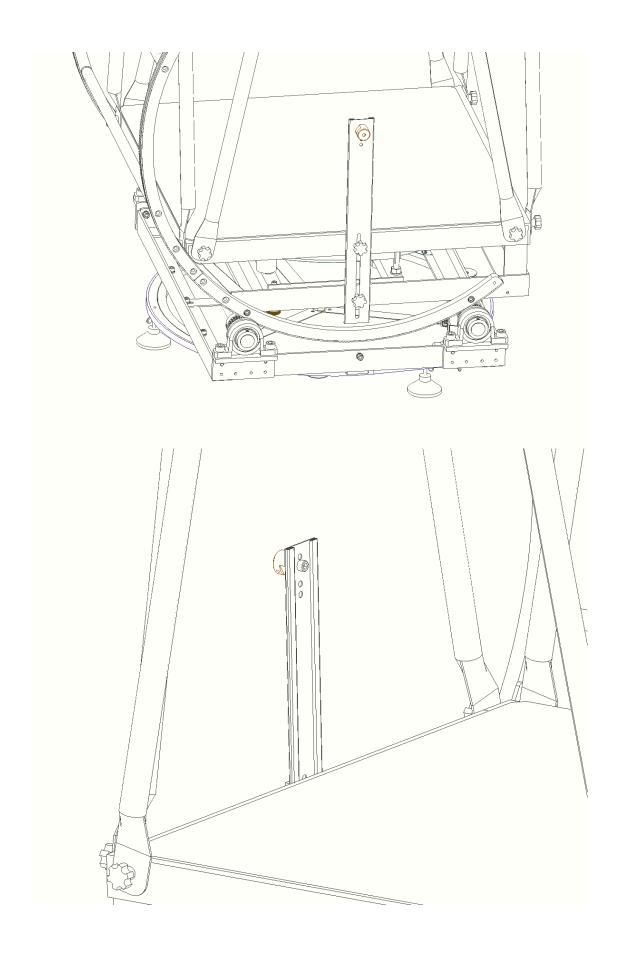

Then install the ALT encoder assembly as below:

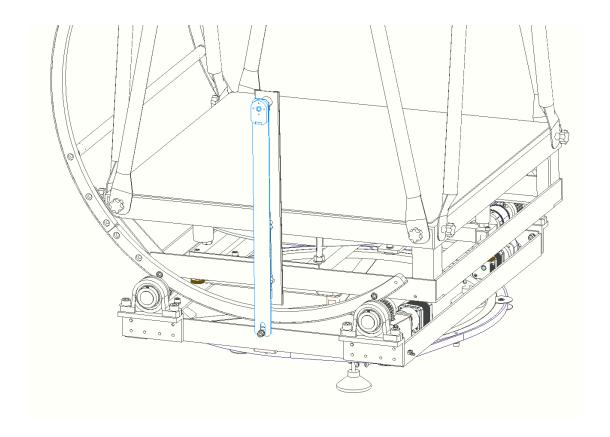


You must adjust the ALT encoder bracket position to make sure the ALT encoder is centered at the virtual ALT bearing axis. Here is how to verify that the ALT encoder is perfectly centered:

Set the scope pointed to zenith, 45 degree, and then 90 degree orientations; once the ALT encoder is well centered; you should see the pivoting screw at the bottom remain at the same location relative to the ALT encoder assembly; in other word, the ALT encoder assembly should not move up and down (or left and right) while the scope moves.

2.4.2 Installation of the Optional Finder Scope


Use 2 provided (hexagon or cross) socket sunk head screws to mount the finder scope base to the upper ring.

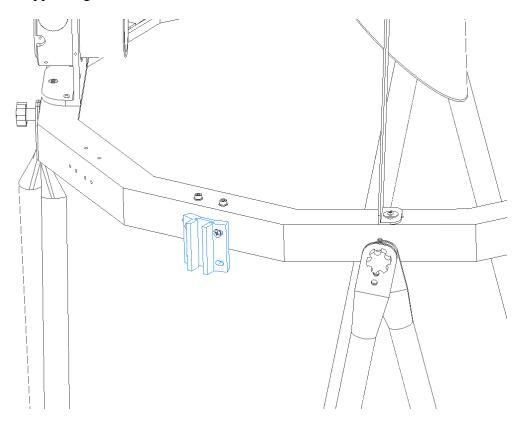

2.5 Balance the scope

The Scope must be well balanced before you can turn on the GoTo. Before you can balance the scope, first you need to unlatch the ALT drive to turn the scope in manual mode in the ALT axis. You need to rotate the adjustable collar in the indicated direction in the following picture to unlatch the ALT drive. Once the scope is in the manual mode in the ALT axis, you can move the scope up and down with your hand; if the scope can stop and stay at any position; then the scope is well balance; otherwise you will need to add some counter weight (not provided) either at the top on the upper ring, or on the mirror box at the bottom. If the scope tends to move down by itself; then it indicates that the scope is top too heavy; so you will need add some counter weight at the bottom; otherwise you will need to add some counter weight at the top.

Once the scope is well balanced; you will need to rotate the adjustable collar firmly to latch the ALT drive system.

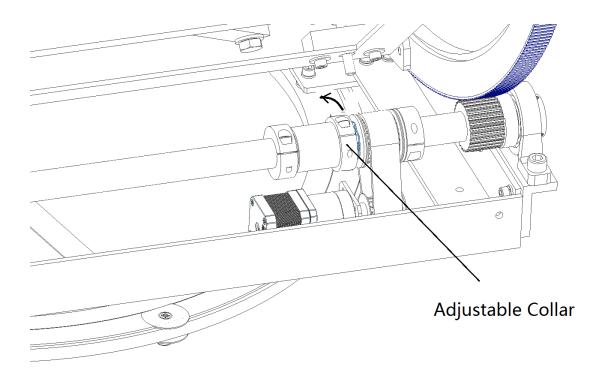

2.6 Adjust the Sling

After UL16G is fully assembled, the sling must be adjusted.

The primary mirror must be supported in the sling and not by the side pins. Point UL16G about 45° above the horizon in manual mode, an angle from which your can comfortably reach and adjust the collimation screws.

You will need to use two wrenches to adjust the sling. Make sure that the sling is hung through the slot on the left (or right) split bolt. Just wrap one or two turns on this side. To do this, rotate the head of the bolt with one wrench and hold the opposing nut with other wrench. Lock it tight.

Now go to the sling bolt on the other side. Hold the bolt head with one wrench and loosen the opposing nut. Turn the bolt to wrap the sling until the mirror lifts off the two lower pins. Raise the mirror until it almost touches the upper side pin.

Lock the bolt in this position by tightening the lock nuts. Check to make sure that the mirror is indeed suspended on the sling by pushing on the back of the mirror with your fingertips. With UL16G in a nearly horizontal position, you should be able to move the mirror off the floatation cell support bars easily.

If the mirror tilts against one of the side pins, loosen the retaining nuts and rotate that pin away from mirror until there is a few mm gap between the mirror and the pin.

The mirror must be supported be the sling and not be the side pins.

3. Connect the GoTo wirings

- Connect the two motors to the controller (You must not connect or disconnect the motors when the controller is powered on)
- Connect the two encoders to the Controller
- Connect 12V VDC (center positive) to the controller

4. Collimate the Optics.

Collimating a telescope can seem intimidating at first, but with practice, it becomes a straightforward process. Regularly check the collimation of your telescope, especially if it's transported frequently, to ensure the best possible views of the night sky.

Keep the primary mirror covered during step 1. Point the telescope to an angle about 60 degrees above the horizontal during collimation steps 1-3.

Ensure that your scope's collimation doesn't shift when pointed at different altitudes. Tighten all locking nuts and screws properly along the entire optical path:

- The focuser is tightly locked in its square base
- The focuser square base is tightly locked onto the rotator
- The rotator is tightly locked onto the upper ring
- All three spider vanes are tightly locked onto the spider hub and the upper ring
- The three collimation screws for the secondary mirror need to be properly tighten after the collimation
- All knob screws for all the truss tubes need to be tighten properly
- The three primary mirror locking screws need to be tighten properly

Two positions have been provided to mount the focuser for the convenience. However, for the maximum collimation stability, and in particular for the heavy load, the focuser should be installed right on top of the Truss Tubes.

Step 1: Center the secondary mirror along the axis of the focuser drawtube.

For this step, use a simple collimation cap (or sight tube). Insert the cap into the focuser and look through the peephole of the sight tube at the secondary mirror. If you don't have a collimation cap or sight tube, you can approximate by eyeballing from a distance, positioning your eye centered with the drawtube.

The secondary mirror should appear round and be exactly centered within the sight tube. If it is, then Step 1 is complete. If not, adjustments might be needed for either the secondary holder, the focuser, or both.

Begin by checking and adjusting the secondary holder. If the error is vertically up or down, adjust the central bolt that connects the holder to the spider hub.

If the discrepancy is to either side of the focuser (perpendicular to the optical axis), examine if the secondary holder is centered within the upper ring. If it's off-center, adjust the spider wing's pulling screws until it's centered.

Step 2: Adjust the tilt of the secondary mirror to direct the focuser's axis toward the center of the primary mirror. To start, remove the cover from the primary mirror.

For this step, you'll need a laser collimator. Insert the laser collimator into the focuser tube. Adjust the three secondary mirror collimation screws until the laser beam is centered on the primary mirror's center spot.

A slight misalignment in the secondary mirror is typically not problematic. As long as the pointing error remains within 1 or 2 percent of the main mirror's diameter, it won't cause any noticeable differences.

Step 3: This step is crucial. Here, you'll adjust the tilt of the primary mirror to ensure the returning laser beam centers on the centre of the laser collimator.

Manipulate the three primary collimation screws and their adjacent locking screws to align the laser's returning beam with the collimator's faceplate.



The primary mirror is not yet collimated.



The primary mirror is fully collimated by laser collimator.


Step 4: Star-Testing Your Collimation

To accurately collimate your telescope, the star test is an effective method. Here's how to do it:

- 1. **Selecting a Star**: Choose a moderately bright star for this test.
- 2. **Aiming the Telescope**: Point your telescope at the selected star.
- 3. **Defocusing the Star**: Slowly defocus the telescope until the star forms a distinct 'donut' shape. This shape is a ring of light with a central dark spot, which is the shadow of the secondary mirror.
- 4. **Analyzing the Donut Shape**: Observe the donut. A perfectly collimated telescope will show a centered dark spot. If the central spot is off-center, it indicates misalignment.
- 5. **Adjusting the Primary Mirror**: If the donut's hole is not centered, gently adjust the primary mirror's collimation screws. Make small adjustments: tighten one screw while slightly loosening the opposite screw to maintain even pressure. Aim to move the defocused star image towards the thicker side of the donut.

- 6. **Re-centering the Star**: After each adjustment, re-center the star in your telescope's field of view by re-aiming the telescope. The position of the star may shift slightly with each collimation adjustment.
- 7. **Repeating the Process**: Continue this process adjusting, re-centering, and observing the defocused star until the donut shape appears symmetrical with the central hole perfectly centered.
- 8. **Final Symmetry Check**: Once the donut appears symmetrical, finetune your focus to check the concentric rings around the star. Proper collimation is indicated by centered and symmetrical rings.

Remember, atmospheric conditions can affect the appearance of the star's image. Conduct this test on a night with stable and clear atmospheric conditions for the best results.

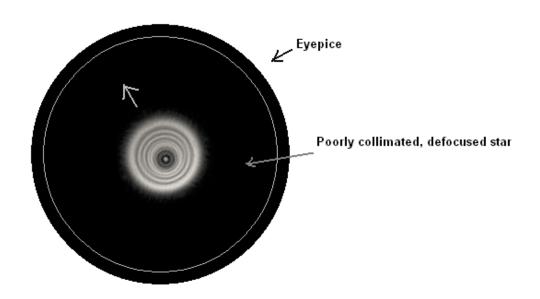

It's advisable to carry out this procedure at the onset of each observing session. Additionally, you should check the collimation sporadically throughout the night. This is crucial because factors like temperature variations or routine handling could cause shifts in your telescope's components, potentially affecting the collimation.

5. Care and Maintenance

5.1 Mirror Storage

Your scope should be stored in a clean, dry, dust-free place, safe from rapid changes in temperature and humidity. Do not store the telescope outdoors, your garage and shed might be OK, but is not recommended. We highly recommended storing the secondary cage, the mirror box with in our optional waterproof Nylon storage bag. Although big enough, make sure do not store the rocker/ground board with the mirrors in the bag for long time; the potential evaporation from the lubricate material used by AZ bearing under high temperature will be harmful to the mirror coating.

5.2 Mirror Cleaning

You should not have to clean the mirror often. The best thing you can do to keep your mirror is to prevent it from getting dirty in the first place! A simple air-blow cleaning, using an optical air dust blower is the next best thing you can do.

6. Specification

- Optical design : Reflector
- Optical diameter: Optical diameter: 406.4mm
- Focal length: 1829mm (f/4.5), 2032mm (f/5)
- Focal ratio: f/4.5, f/5
- Eyepiece height at zenith: 1690mm / 66.5" (f/4.5), 1890mm / 74.5" (f/5)
- Optics type : Parabolic
- Eyepieces: Not included
- Optical quality: Diffraction limited++ (Strehl 0.95+ for the primary mirror, 1/10 lambada or better for the secondary mirror)
- Finder scope : Not included
- Focuser: 2" dual-speed linear bearing Crayford
- Secondary mirror: 80 mm (f/4.5), 70mm (f/5)
- Secondary mirror obstruction by diameter: 19.7% (f/4.5), 17.3% (f/5)
- Secondary mirror obstruction by area: 3.9% (f/4.5), 3.0% (f/5)
- Mirror coatings: 96% Enhanced coating on both of the primary and secondary mirrors
- Tube material: 6063-T6 Aluminum Alloy tubes with black stainless steel knob screws; Aluminum Alloy main structure (OTA and mount) and structure steel mirror cell.
- Length of optical tube: ~72 in (f/4), ~79 in (f/4.5)
- Weight, optical tube: 55.0 lbs
- Weight, fully assembled: 65.0 lbs.
- Weight, fully assembled (with GoTo drive): ~78 lbs. (f/4.5), ~79 lbs
- Other features: Sling lateral support and deluxe push-pull brass knob collimation screws

7. Limited Warranty

Hubble Optics (Optel Engineering Group Inc.), Seller, warrants to the original purchaser only, that goods sold will be free of material defects in design, materials and workmanship for a period of one year following the date of shipment by Seller to Buyer. Seller will repair or replace, or refund the purchase price as to, goods that do not conform to the foregoing warranty, provided the cause of the nonconformity does not arise from or relate to modification, misuse, or abuse by the customer, and provided a warranty claim, stating in writing and with reasonable particularity the claimed nonconformity, and the goods, are delivered to Seller within the one year period. Repair or replacement of the product or refund of the purchase price, at Seller's sole option, shall be the Buyer's exclusive remedies. Seller shall not be responsible for any indirect, special or consequential damages arising from use of the products. This warranty is given in lieu of any other warranties, express or implied, including of performance, merchantability, fitness for particular purpose, or arising from course of dealing or usage of trade. Goods subject to this warranty must be shipped postage pre-paid by Buyer to the Seller. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

8. Technical Support

Hubble Optics (Optel Engineering Group Inc.) will provide the support for the basic operations outlined in this document by email. You will receive a response, generally within 24 hours.